



ВИННСЛ

V I N N S L



PCLNR\L



95°

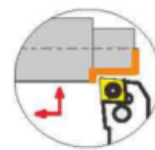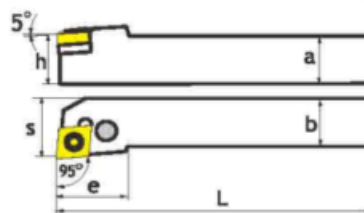





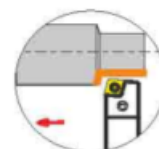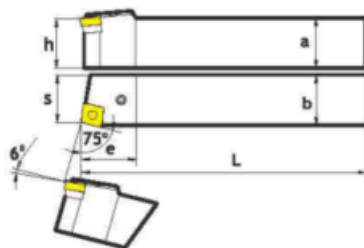

Обозначение	Размеры						СМП	Винь	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PCLNR\L 1616-H09	16	16	100	16	20	20	CN..0903	VHX0613	PC09318	S2.5	LV3	SP3
2020-K09	20	20	125	20	25	22						
2525-M09	25	25	150	25	32	22						
2020-K12	32	32	125	20	26	28	CN..1204	VHX0821	PC12318	S3	LV4	SP4
2525-M12	25	25	150	25	32	28						
3232-P12	32	32	170	32	39	32						
2525-M16	25	25	150	25	32	36	CN..1606	VHX0825	PC16476	S3	LV5	SP5
3232-P16	32	32	170	32	39	36						
3232-P19	32	32	170	32	40	40						
4040-S19	40	40	250	40	49	40	CN..1906	VHX1027	PC19476	S4	LV6	SP6
4040-S2507	40	40	250	40	50	47						
4040-S2509	40	40	250	40	50	47						
							CN..2507	VHX1236	PC25	S5	LV8	SP8
							CN..2509					

PCLNR\L


75°








Обозначение	Размеры						СМП	Винь	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PCBNR\L 2020-P12	20	20	125	20	17	30	CN..1204	VHX0821	PC12318	S3	LV4	SP4
2525-M12	25	25	150	25	22	26						
3232-P12	32	32	170	32	29	27						
2525-M16	25	25	150	25	22	32	CN..1606	VHX0825	PC16476	S3	LV5	SP5
3232-P16	32	32	170	32	27	33						
3232-P19	32	32	170	32	27	38						
4040-S19	40	40	250	40	35	38	CN..1906	VHX1027	PC19476	S4	LV6	SP6
4040-S2507	40	40	250	40	37	50						
4040-S2509	40	40	250	40	37	50						
							CN..2507	VHX1236	PC25	S5	LV8	SP8
							CN..2509					

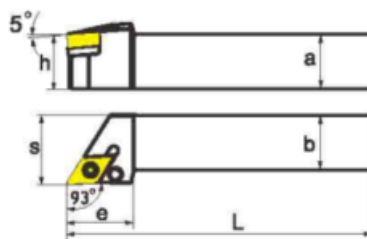PDJNR\L


93°







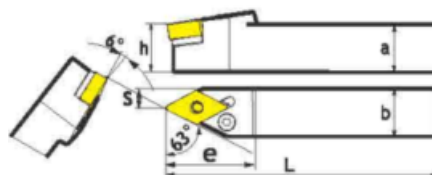

Обозначение		Размеры						СМП	Винь	Опорная пластина	Ключ	Рычаг	Штифт
		a	b	L	h	S	e						
PDJNR\	1616-H11	16	16	100	16	20	25	DN..1104	VHX0613	PD11270	S2.5	LV3	SP3
	2020-K11	20	20	125	20	25	25						
	2525-M11	25	25	150	25	30	30						
	2020-K15	20	20	125	20	25	32	DN..1506	VHX0821	PD15318	S3	LV4B	SP4
	2525-M15	25	25	150	25	32	35						
	3232-P15	32	32	170	32	38	35						
	2020-K15-3	20	20	125	20	25	35	DN..1504	VHX0825	PD15318	S3	LV4	SP4
	2525-M15-3	25	25	150	25	32	35						
	3232-P15-3	32	32	170	32	38	35						

PDNNR\L



63°



Обозначение	Размеры							СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e							
PDNNR\ 2020-K15	16	16	100	16	8	37	DN..1506	VHX0821	PD15318	S3	LV4B	SP4	
2525-M15	20	20	125	20	12.5	37							
3225-P15	25	25	150	25	12.5	37							
3232-P15	20	20	125	20	16	37							
2020-K15-3	25	25	150	25	8	37	DN..1504	VHX0825	PD15318	S3	LV4	SP4	
2525-M15-3	32	32	170	32	12.5	37							
3232-P15-3	20	20	125	20	16	37							

PSBNR\L



75°

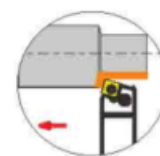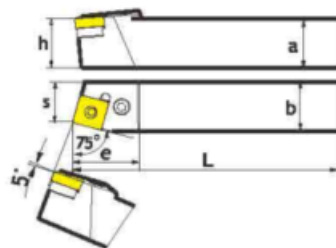





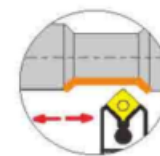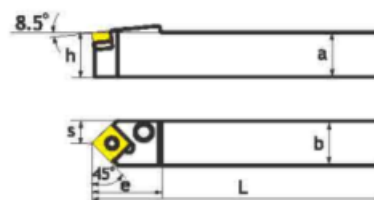

Обозначение	Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PSBNR\L 1616-H09	16	16	100	16	13	21	SN..0903	VHX0613	PS09318	S2.5	LV3	SP3
2020-K09	20	20	125	20	17	23						
2020-K12	20	20	125	20	17	28						
2525-M12	25	25	150	25	22	28						
3225-P12	32	25	170	32	22	28	SN..1204	VHX0821	PS12318	S3	LV4	SP4
3232-P12	32	32	170	32	29	28						
2525-M15	25	25	150	32	22	32						
3232-P15	32	32	170	25	28	32						
3232-P19	32	32	170	32	36	45	SN..1504	VHX0825	PS16476	S3	LV5	SP5
4040-S19	40	40	250	40	35	45						
4040-S2507	40	40	250	40	35	50						
4040-S2509	40	40	250	40	35	50						
							SN..1906	VHX1027	PS19476	S4	LV6	SP6
							SN..2507	VHX1236	PS25634	S5	LV8	SP8
							SN..2509		PS25476			



PSDNN

45°





Обозначение	Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PSDNN 2020-K12	20	20	125	20	10	30	SN..1204	VHX0821	PS12318	S3	LV4	SP4
2525-M12	25	25	150	25	12.5	32						
3225-P12	32	32	170	32	16	30						
2525-M15	25	25	150	25	12.5	40						
3232-P15	32	32	170	32	16	40	SN..1504	VHX0825	PS16476	S3	LV5	SP5
3232-P19	32	32	170	32	16	40						
4040-S19	40	40	250	40	20	40						
4040-S2507	40	40	250	40	20	50						
4040-S2509	40	40	250	40	20	50	SN..1906	VHX1027	PS19476	S4	LV6	SP6
							SN..2507	VHX1236	PS25634	S5	LV8	SP8
							SN..2509		PS25476			

PRDCN

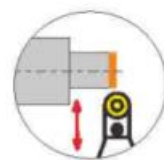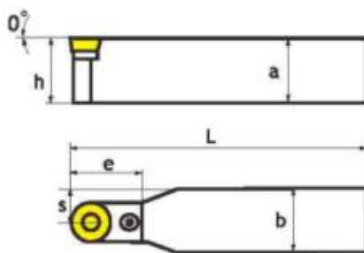


Обозначение		Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
		a	b	L	h	S	e						
PRDCN	2020-K12	20	20	125	20	10	25	RCMX1204	VHX0613	PR1204	S2.5	LCL12C	SP3
	2525-M12	25	25	150	25	12.5	25						
	2525-M16	25	25	150	25	10	35	RCMX1606	VHX0621	PR1604	S2.5	LCL16C	SP4
	3232-P16	32	32	170	32	16	32						
	3232-P20	32	32	170	32	16	40	RCMX2006	VHX0825	PR2004	S3	LCL20C	SP5
	4040-T20	40	40	300	40	20	45						
	3232-P25	32	32	170	32	16	45	RCMX2507	VHX1030	PR2506	S4	LCL25C	SP6
	4040-T25	40	40	300	40	20	50						



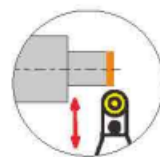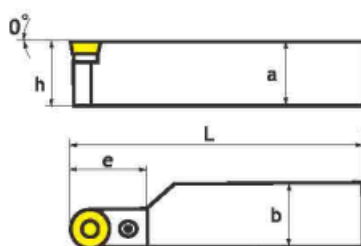



PRACR\L

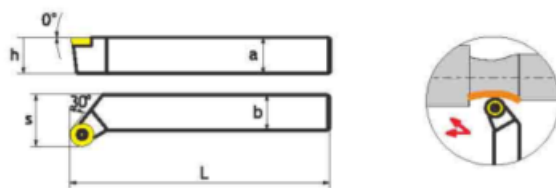

Обозначение		Размеры					СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
		a	b	L	h	e						
PRACR\L	2020-K12	20	20	125	20	30	RCMX1204	VHX0613	PR1204	S2.5	LCL12C	SP3
	2525-M12	25	25	150	25	30						
	2525-M16	25	25	150	25	35	RCMX1606	VHX0621	PR1604	S2.5	LCL16C	SP4
	3232-P16	32	32	170	32	35						
	3232-P20	32	32	170	32	40	RCMX2006	VHX0825	PR2004	S3	LCL20C	SP5
	4040-T20	40	40	300	40	50						
	3232-P25	32	32	170	32	45	RCMX2507	VHX1030	PR2506	S4	LCL25C	SP6
	4040-T25	40	40	300	40	50						


PRGCR\L









Обозначение	Размеры					СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	s						
PRGCR\L 2020-K12	20	20	125	20	25	RCMX1204	VHX0613	PR1204	S2.5	LCL12C	SP3
2525-M12	25	25	150	25	32						
2525-M16	25	25	150	25	35						
3232-P16	32	32	170	32	42	RCMX1606	VHX0621	PR1604	S2.5	LCL16C	SP4
3232-P20	32	32	170	32	40						
4040-T20	40	40	300	40	50	RCMX2006	VHX0825	PR2004	S3	LCL20C	SP5
3232-P25	32	32	170	32	45						
4040-T25	40	40	300	40	56	RCMX2507	VHX1030	PR2506	S4	LCL25C	SP6

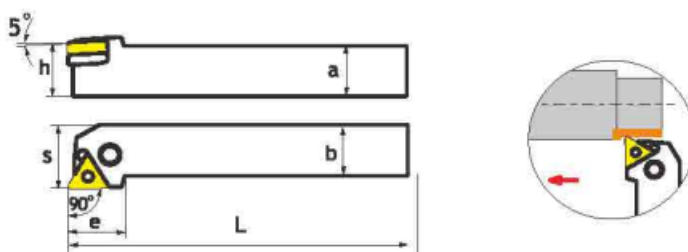PTGNR\L



90°







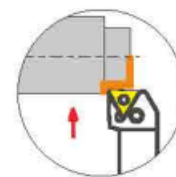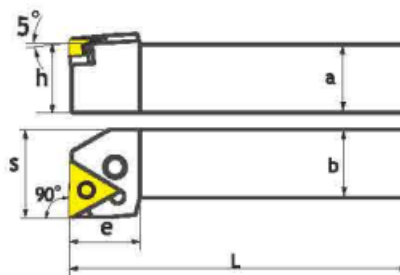

Обозначение	Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PTGNR/L 1616-H11	16	16	100	16	19	18	TN..1103	VHX059B	-	S2	LV2	-
2020-K11	20	20	125	20	24	20						
2525-M11	25	25	150	25	29	20						
1616-H16	16	16	100	16	19	22	TN..1604	VHX0617	PT16	S2.5	LV3	SP3
2020-K16	20	20	125	20	23	25						
2525-M16	25	25	150	25	29	25						
3232-P16	32	32	170	32	37	32	TN..2204	VHX0821	PT22	S3	LV4	SP4
2525-M22	25	25	150	25	30	30						
3232-P22	32	32	170	32	37	32						
3232-P27	32	32	170	32	37	38	TN..2706	VHX0825	PT27	S3	LV5	SP5
4040-S27	40	40	250	40	47	38						

PTFNR\L



90°







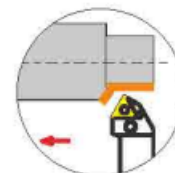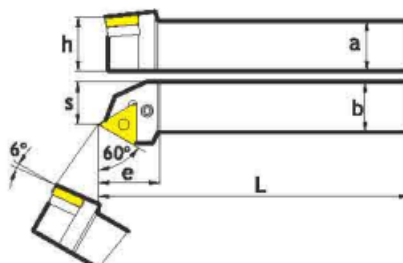

Обозначение	Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PTFNR/L 1616-H16	16	16	100	16	20	20	TN..1604	VHX0617	PT16	S2.5	LV3	SP3
2020-K16	20	20	125	20	25	20						
2525-M16	25	25	150	25	30	25						
2525-M22	25	25	150	25	32	30	TN..2204	VHX0821	PT22	S3	LV4	SP4
3232-P22	32	32	170	32	38	30						
3232-P27	32	32	170	32	38	35	TN..2706	VHX0825	PT27	S3	LV5	SP5
4040-S27	40	40	250	40	50	34						

PTTNR\L


60°







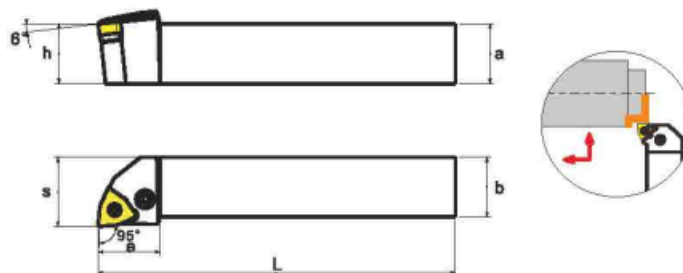

Обозначение	Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
	a	b	L	h	S	e						
PTTNR/L 1616-H16	16	16	100	16	13	25	TN..1604	VHX0617	PT16	S2.5	LV3	SP3
2020-K16	20	20	125	20	17	25						
2525-M16	25	25	150	25	22	32	TN..2204	VHX0821	PT22	S3	LV4	SP4

PWLNR\L


95°



Обозначение		Размеры						СМП	Винт	Опорная пластина	Ключ	Рычаг	Штифт
		a	b	L	h	S	e						
PWLNR\L	1616-H06	16	16	100	16	19	22	WN..0604	VHX0617	PW06270	S2.5	LV3	SP3
	2020-K06	20	20	125	20	23	25						
	2525-M06	25	25	150	25	28	25						
	2020-K06	20	20	125	20	28	26						
	2525-M08	25	25	150	25	29	26	WN..0804	VHX0821	PW08318	S3	LV4	SP4
	3232-P08	32	32	170	32	37	26						

DCLNR\L


95°

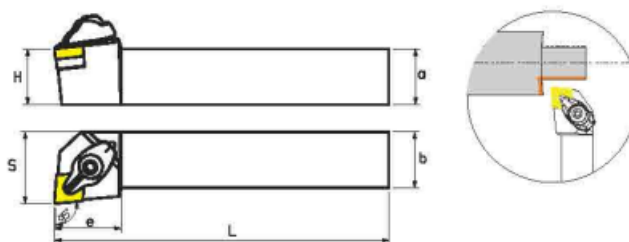

Обозначение		Размеры						СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
		A	b	L	h	S	e						
DCLNR\L	2020-K12	20	20	125	20	27	32	CN..1204	MC 1204	S3	DCL2612	DM0625	DSP0612
	2525-M12	25	25	150	25	32	30						
	3232-P12	32	32	170	32	39	30						
	2525-M16	25	25	150	25	32	36	CN..1604	DC16635	S4	DLM5	DM0625	L60M5x12
	3232-P16	32	32	170	32	40	36						
	3232-P19	32	32	170	32	40	40	CN..1906	MC1904	S6	DCL1934	M8x35	DSP0814
	4040-R19	40	40	200	40	50	40						

DCBNR\L


75°

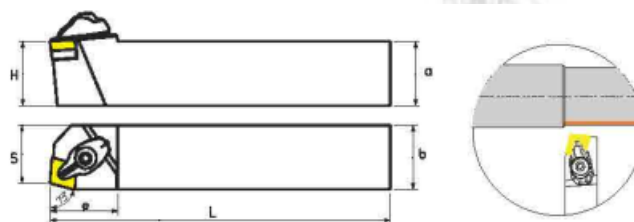





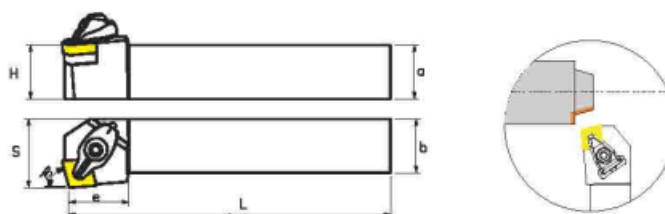

Обозначение	Размеры							СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
	A	b	L	h	S	e							
DCBNR\L 2020-K12	20	20	125	20	17	32							
	25	25	150	25	22	30	CN..1204	MC 1204	S3	DCL2612	DM0625	DSP0612	
	32	32	170	32	29	30							
2525-M16	25	25	150	25	23	36							
	32	32	170	32	29	36	CN..1604	DC16635	S4	DLM5	DM0625	L60M5x12	
	32	32	170	32	28	40							
3232-P19	32	32	170	32	28	40							
4040-R19	40	40	200	40	36	40	CN..1906	MC1904	S6	DCL1934	M8x35	DSP0814	

DCKNR\L



75°



Обозначение	Размеры							СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
	A	b	L	h	S	e							
DCBNR\L 2020-K12	20	20	125	20	26	28							
	25	25	150	25	32	28	CN..1204	MC 1204	S3,S4	DCL2612	DM0625	DSP0612	
	32	32	170	32	39	28							

DDJNR\L



93°

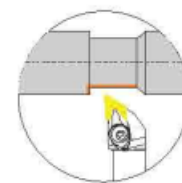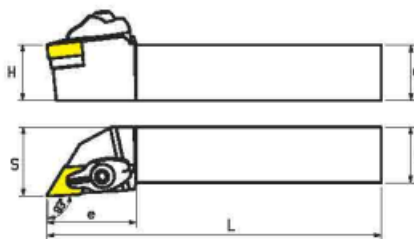

Обозначение	Размеры							СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
	A	b	L	h	S	e							
DDJNR\L 2020-K11	20	20	125	20	25	32		DN..1104	MD1103	S4	DCL2211	DM0520	DSP0510
2525-M11	25	25	150	25	30	32							
2020K1504	20	20	125	20	25	40		DN..1504	MD1504	S4,S3	DCL2612	DM0625	DSP0612
2525M1504	25	25	150	25	31	40							
3232P1504	32	32	170	32	39	40							
2020K1506	20	20	125	20	25	40		DN..1506					
2525M1506	25	25	150	25	31	40							
3232P1506	32	32	170	32	39	40							



DDPNN


62.5°

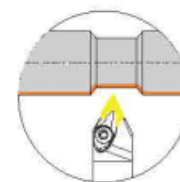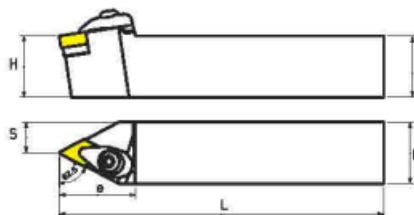



Обозначение	Размеры							СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
	A	b	L	h	S	e							
DDPNN 2020-K11	20	20	125	20	10	32		DN..1104	MD1103	S4	DCL2211	DM0520	DSP0510
2525-M11	25	25	150	25	12	36							
2020K1504	20	20	125	20	10	36		DN..1504	MD1504	S4,S3	DCL2612	DM0625	DSP0612
2525M1504	25	25	150	25	12	36							
3232P1504	32	32	170	32	16	36							
2020K1506	20	20	125	20	10	36		DN..1506					
2525M1506	25	25	150	25	12	36							
3232P1506	32	32	170	32	16	36							

DSBNR\L

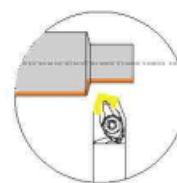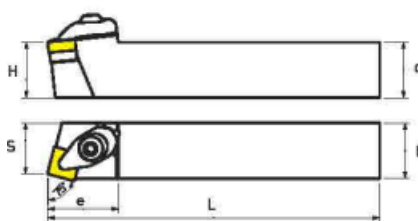

Обозначение		Размеры						СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
		A	b	L	h	S	e						
DSBNR\L	2020-K12	20	20	125	20	18	34	SN..1204	MS 1204	S3,S4	DCL2612	DM0625	DSP0612
	2525-M12	25	25	150	25	23	32						
	3232-P12	32	32	170	32	30	33						
	2525-M15	25	25	150	25	21	40	SN..1506	DC15635	T20,S4	DLM5	DM0625	L60M5x12
	3232-P15	32	32	170	32	28	40						
	3232-P19	32	32	170	32	28	40						
	4040-R19	40	40	200	40	36	40	SN..1906	MS1904	S6,S4	DCL1934	M8x35	DSP0814



DSDNN

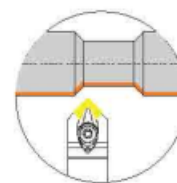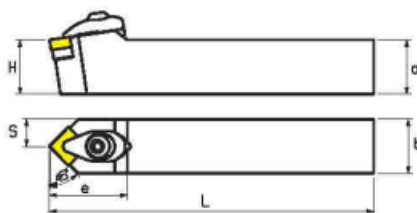

Обозначение		Размеры						СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
		A	b	L	h	S	e						
DSDNN	2020-K12	20	20	125	20	10	36	SN..1204	MS 1204	S3,S4	DCL2612	DM0625	DSP0612
	2525-M12	25	25	150	25	12	36						
	3232-P12	32	32	170	32	12	36						
	2525-M15	25	25	150	25	12	40	SN..1506	DC15635	T20,S4	DLM5	DM0625	L60M5x12
	3232-P15	32	32	170	32	16	40						
	3232-P19	32	32	170	32	16	48						
	4040-R19	40	40	200	40	20	48	SN..1906	MS1904	S6,S4	DCL1934	M8x35	DSP0814

DSSNR\L



45°

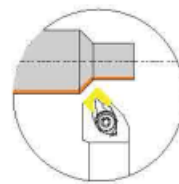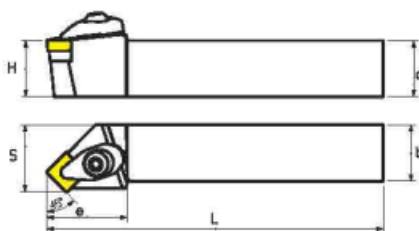

Обозначение	Размеры							СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
	A	b	L	h	S	e							
DSSNR\L 2020-K12	20	20	125	20	25	36		SN..1204	MS 1204	S3,S4	DCL2612	DM0625	DSP0612
2525-M12	25	25	150	25	30	35							
3232-P12	32	32	170	32	38	35							
2525-M15	25	25	150	25	32	40		SN..1506	DC15635	T20,S4	DLM5	DM0625	L60M5x12
3232-P15	32	32	170	32	40	40							
3232-P19	32	32	170	32	45	48		SN..1906	MS1904	S6,S4	DCL1934	M8x35	DSP0814
4040-R19	40	40	200	40	43	48							

DSKNR\L


75°

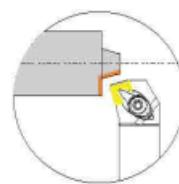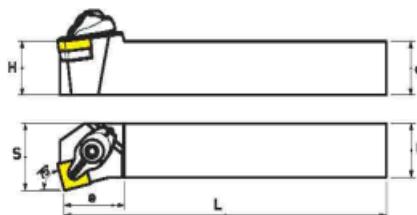





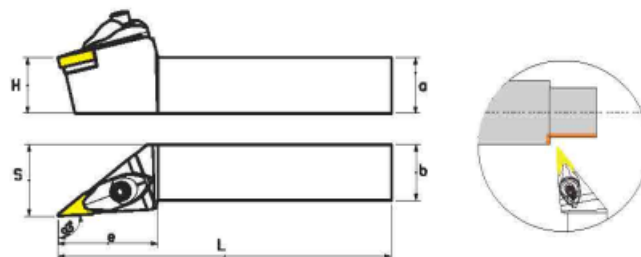

Обозначение	Размеры							СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
	A	b	L	h	S	e							
DSKNR\L 2020-K12	20	20	125	20	26	28		SN..1204	MS 1204	S3,S4	DCL2612	DM0625	DSP0612
2525-M12	25	25	150	25	36	28							
3232-P12	32	32	170	32	38	32							

DVJNR\L


93°







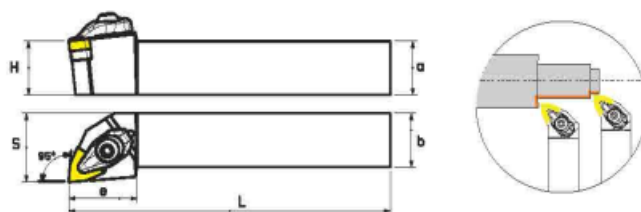

Обозначение		Размеры						СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
		A	b	L	h	S	e						
DVJNR\L	2020-K16	20	20	125	20	26	45	VN..1604	MV1603	S3,S4	DCL3113	M5X25	DSP0510
	2525-M16	25	25	150	25	32	45						
	3225-P16	32	25	170	32	32	45						
	3232-P16	32	32	170	32	40	45						

DWLNR\L



95°



Обозначение		Размеры						СМП	Опорная пластина	Ключ	Кронштейн	Винт кронштейна	Винт
		A	b	L	h	S	e						
DWLNR\L	2020-K08	20	20	125	20	25	32	WN..0804	MW0804	S4,S3	DCL2612	DM0625	DSP0612
	2525-M08	25	25	150	25	32	31						
	3225-P08	32	25	170	32	32	31						
	3232-P08	32	32	170	32	39	31						
	2020-K06	20	20	125	20	25	25	WN..0603	MW0603	S3	DCL2211	DM0520	DSP0510
	2525-M06	25	25	150	25	30	25						

SCLCR\L



95°

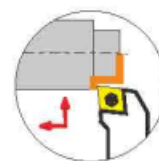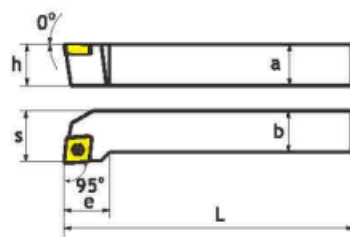





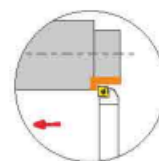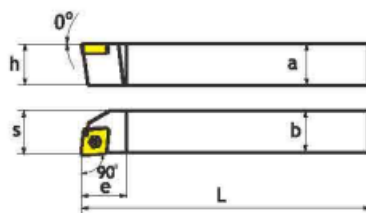

Обозначение	Размеры							СМП	Винт	Ключ
	A	b	L	h	S	e				
SCLCR\L 1212-F09	12	12	80	12	15	16	CC.T 09T3			
1616-H09	16	16	100	16	20	16				
2020-K09	20	20	125	20	23	20				
2020-K12	20	20	125	20	24	25				
2525-M12	25	25	150	25	29	25	CC.T 1204			
3225-P12	32	25	170	32	29	25				
3232-P12	32	32	170	32	36	38				

SCACR\L


90°






Обозначение	Размеры							СМП	Винт	Ключ
	A	b	L	h	S	e				
SCACR\L 1010-E06	10	10	70	10	10	10	CC.T 0602			
1212-F09	12	12	80	12	13	16	CC.T 09T3			

SDACR\L


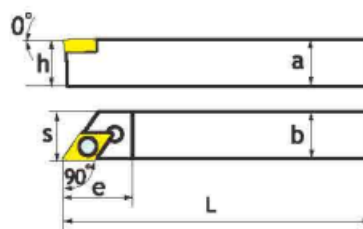
90°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SDACR\L 1010-E07	10	10	70	10	10,5	15	DC.T 0702	L60M2.5X5	T08
1212-F11	12	12	80	12	12,5	20			
1616-H11	16	16	100	16	16,7	20	DC.T 11T3	L60M4X8	T15

SDJCR\L

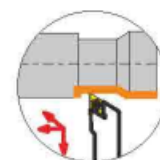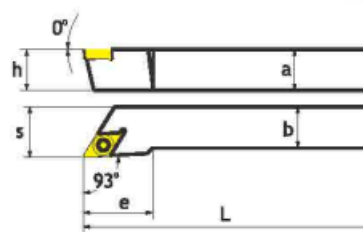
93°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SDJCR\L 1010-E07	10	10	70	10	12	15	DC.T0702	L60M2.5X5	T08
1212-F07	12	12	80	12	14	15			
1616-H07	16	16	100	16	18	18			
2020-K07	20	20	125	20	22	18			
1616-H11	16	16	100	16	19	20	DC.T11T3	L60M4X8	T15
2020-K11	20	20	125	20	23	26			
2525-M11	25	25	150	25	28	26			
3225-P11	32	25	170	32	28	26			
3232-P11	32	32	170	32	32	31			

SDNCN

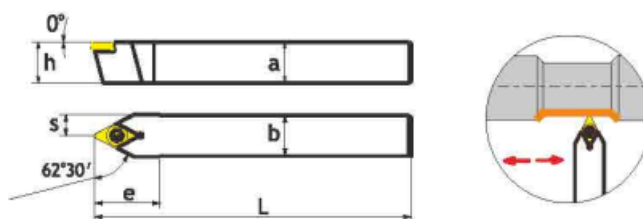
62° 30'






Обозначение		Размеры						СМП	Винт	Ключ
		A	b	L	h	S	e			
SDNCN	1010-E07	10	10	70	10	5	16	DC.T0702	L60M2.5X4	T08
	1212-E07	12	12	80	12	6	20			
	1212-H11	12	12	100	12	6	22			
	1616-H11	16	16	100	16	8	22	DC.T11T3	L60M4X8	T15
	2020-K11	20	20	125	20	10	22			
	2525-M11	25	25	150	25	12.5	22			

SVJCR\L

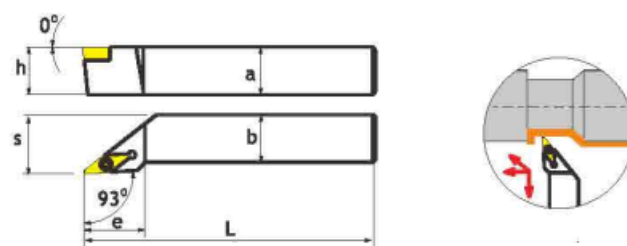
93°






Обозначение		Размеры						СМП	Винт	Ключ
		A	b	L	h	S	e			
SVJCR\L	1212-F11	12	12	80	12	14	20	VC.T1103	L60M2.5X5	T08
	1616-H11	16	16	100	16	18	22			
	2020-K11	20	20	125	20	22	27			
	2525-M11	25	25	150	25	27	35			
	1616-H16	16	16	100	16	18	32	VC.T1604	L60M4X8	T15
	2020-K16	20	20	125	20	22	32			
	2525-M16	25	25	150	25	27	35			
	3225-P16	32	25	170	32	27	35			
	3232-P16	32	32	170	32	35	45			

SVJBR\L

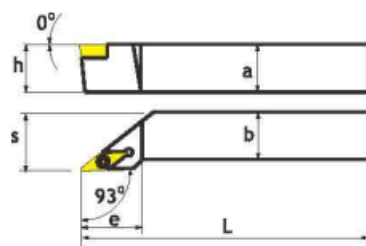
93°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SVJCR\L 1212-F11	12	12	80	12	14	27	VB.T1103	L60M2.5X5	T08
1616-H11	16	16	100	16	18	27			
2020-K11	20	20	125	20	22	27			
2525-M11	25	25	150	25	27	27			
1616-H16	16	16	100	16	18	38	VB.T1604	L60M4X8	T15
2020-K16	20	20	125	20	22	41			
2525-M16	25	25	150	25	27	41			
3225-P16	32	25	170	32	27	41			
3232-P16	32	32	170	32	35	41			

SVABR\L


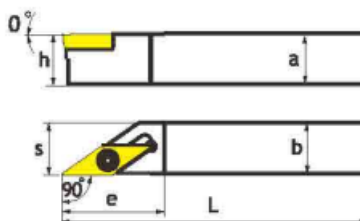
90°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SVABR\L 1616-H16	16	16	100	16	16.5	32	VB.T1604	L60M4X8	T15
2020-K16	20	20	125	20	20.5	32			
2525-M16	25	25	150	25	25.5	38			

SVACR\L

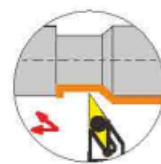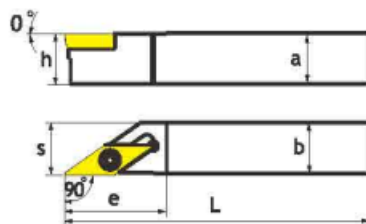
90°






Обозначение		Размеры						СМП	Винт	Ключ
		A	b	L	h	S	e			
SVACR\L	1616-H16	16	16	100	16	16.5	32	VC.T1604	L60M4X8	T15
	2020-K16	20	20	125	20	20.5	32			
	2525-M16	25	25	150	25	25.5	38			

SVVBN

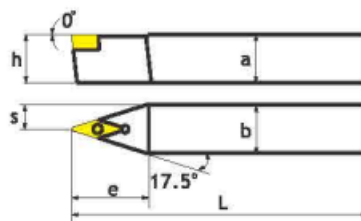
72° 30'






Обозначение		Размеры						СМП	Винт	Ключ
		A	b	L	h	S	e			
SVVBN	1212-F11	12	12	80	12	6	22	VB.T1103	L60M2.5X5	T08
	1616-H11	16	16	100	16	8	27			
	2020-K11	20	20	125	20	10	30			
	1616-H16	16	16	100	16	8	33			
	2020-K16	20	20	125	20	10	33	VB.T1604	L60M4X8	T15
	2525-M16	25	25	150	25	12.5	38			
	3225-P16	32	25	170	32	12.5	38			
	3232-P16	32	32	170	32	16	38			

SVVCN


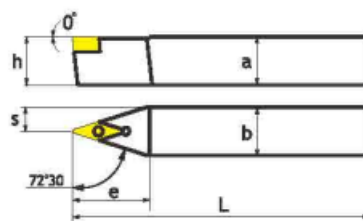
72° 30'






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SVVBN 1212-F11	12	12	80	12	6	22	VC.T1103	L60M2.5X5	T08
1616-H11	16	16	100	16	8	27			
2020-K11	20	20	125	20	10	30			
1616-H16	16	16	100	16	8	33	VC.T1604	L60M4X8	T15
2020-K16	20	20	125	20	10	33			
2525-M16	25	25	150	25	12.5	38			
3225-P16	32	25	170	32	12.5	38			
3232-P16	32	32	170	32	16	38			

SSBCR\L

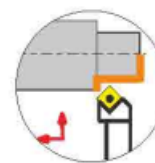
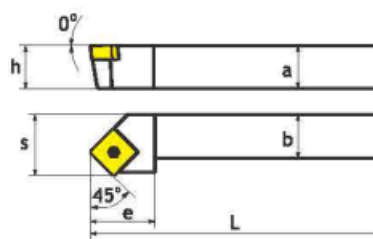
45°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SSBCR\L 1212-F09	12	12	80	12	11	14	SC.T09T3	L60M4X8	T15
1616-H09	16	16	100	16	13	18			
2020-K12	20	20	125	20	17	25			
2525-M12	25	25	150	25	22	25	SC.T1204	L60M5X12	T20
3232-P12	32	32	170	32	27	28			

SSDCN

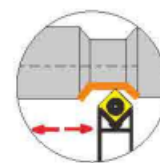
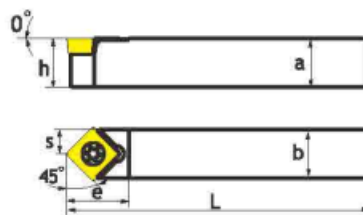
45°






Обозначение		Размеры						СМП	Винт	Ключ
		A	b	L	h	S	e			
SSBCR\L	1212-F09	12	12	80	12	6	16	SC.T09T3	L60M4X8	T15
	1616-H09	16	16	100	16	8	16			
	2020-K09	20	20	125	20	10	16			
	2525-M09	25	25	150	25	12.5	25			
	2020-K12	20	20	125	20	10	25	SC.T1204	L60M5X12	T20
	2525-M12	25	25	150	25	12.5	25			
	3232-P12	32	32	170	32	16	25			

SSKCR\L

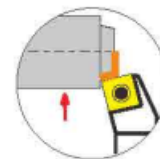
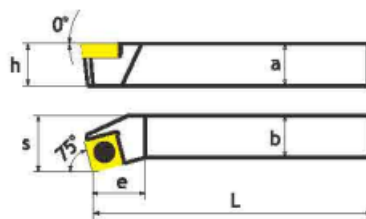
75°






Обозначение		Размеры						СМП	Винт	Ключ
		A	b	L	h	S	e			
SSKCR\L	1616-H09	16	16	100	16	20	13	SC.T09T3	L60M4X8	T15
	2020-K09	20	20	125	20	25	18			
	2020-K12	20	20	125	20	25	18			
	2525-M12	25	25	150	25	32	22	SC.T1204	L60M5X12	T20
	3232-P12	32	32	170	32	40	27			

SSSCR\L

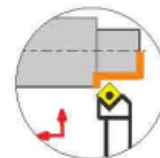
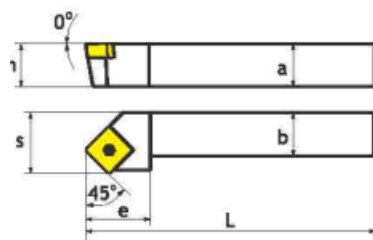
45°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SSSCR\L 1616-H09	16	16	100	16	20	16	SC.T09T3	L60M4X8	T15
2020-K09	20	20	125	20	25	20			
2020-K12	20	20	125	20	25	23			
2525-M12	25	25	150	25	32	25	SC.T1204	L60M5X12	T20
3232-P12	32	32	170	32	38	28			

STFCR\L

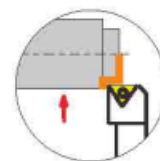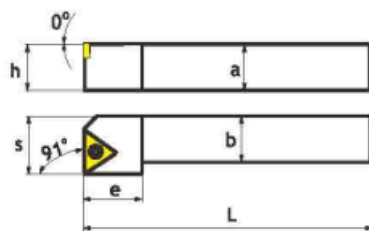
91°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
STFCR\L 1212-F11	12	12	80	12	14	14	TC.T1102	L60M2.5X5	T08
1616-H11	16	16	100	16	18	16			
2020-K11	20	20	125	20	22	16			
1616-H16	16	16	100	16	18	19	TC.T16T3	L60M4X8	T15
2020-K16	20	20	125	20	22	19			
2525-M16	25	25	150	25	27	24			

STGCR\L

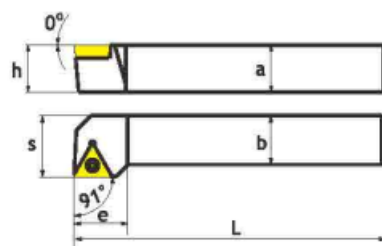
91°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
STGCR\L 0808-D09	08	08	60	8	10	11	ТС.Т0902	L60M2.5X5	Т06
1010-E09	10	10	70	10	11	11			
1212-F11	12	12	80	12	14	14	ТС.Т1102	L60M2.5X5	Т08
1616-H11	16	16	100	16	17	16			
2020-K16	20	20	125	20	22	21	ТС.Т16Т3	L60M4X8	Т15
2525-M16	25	25	150	25	27	21			

STTCR\L


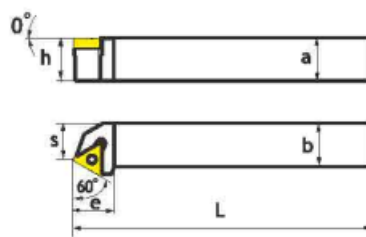
60°






Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
STTCR\L 1616-H11	16	16	100	16	13	14	ТС.Т1102	L60M2.5X5	Т08
1616-H16	16	16	100	16	13	19			
2020-K16	20	20	125	20	17	19	ТС.Т16Т3	L60M4X8	Т15

SWACR\L

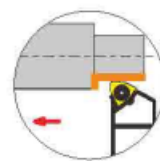
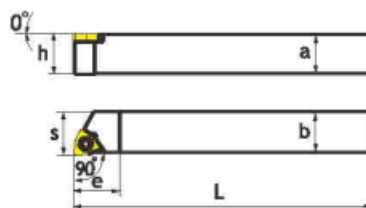
90°







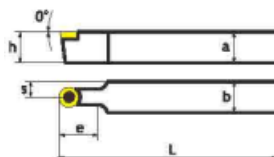

Обозначение	Размеры						СМП	Винт	Ключ
	A	b	L	h	S	e			
SWACR\L 1010-E04	10	10	70	10	10.5	10	WC.X0402	L60M2.5X5	T08
1212-F04	12	12	80	12	12.5	14			
1616-H06	16	16	100	16	16.5	20			
2020-K08	20	20	125	20	20.5	24	WC.X0804	L60M4X8	T15


SRDCN

0°





Обозначение	Размеры						СМП	Винт	Ключ	Опорная пластина	Винт	Ключ
	A	b	L	h	S	e						
SRDCN 2020-K06	20	20	125	20	10	11	RC.T0602	L60M2.5X5	T08	-	-	-
2525-M06	25	25	150	25	12.5	11						
2020-K08	20	20	125	20	10	16						
2525-M08	25	25	150	25	12.5	16	RC.T0803	L603X7	T09	-	-	-
2020-K10	20	20	125	20	10	25						
2525-M10	25	25	150	25	12.5	25						
2020-K12	20	20	125	20	10	35	RC.T1204	L60M3.5X12	T15	-	-	-
2525-M12	25	25	150	25	12.5	35						
3225-P12	32	25	170	32	16	35						
2525-M16	25	25	150	25	12.5	35	RC.T1606	L60M4X16	T20	R16BS	SM0614	S4
3232-P16	32	32	170	32	16	40						
3232-P20	32	32	170	32	16	40	RCMX20	L60M5X16	T20	R20BS	SM0814	S5
4040-S20	40	40	250	40	20	40						

SRGCR\L

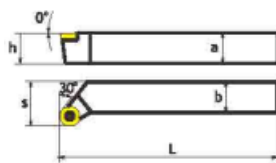

Обозначение		Размеры					СМП	Винт	Ключ	Опорная пластина	Винт	Ключ
		A	b	L	h	S						
SRGCR\L	2020-K10	20	20	125	20	25	RC.T10T3	L60M3X7	T15	-	-	-
	2525-M10	25	25	150	25	32						
	2020-K12	20	20	125	20	27	RC.T1204	L60M3.5X1 2	T15	-	-	-
	2525-M12	25	25	150	25	32						
	3225-P12	32	25	170	32	32	RC.T1606	L60M4X16	T20	R16BS	SM0614	S4
	2525-M16	25	25	150	25	32						
	3232-P16	32	32	170	32	40	RCMX20	L60M5X16	T20	R20BS	SM0814	S5
	3232-P20	32	32	170	32	40						
	4040-S20	40	40	250	40	40						


SRACR\L

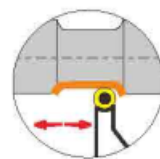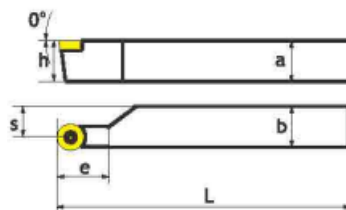





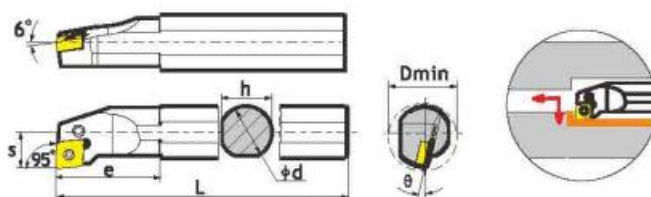

Обозначение		Размеры					СМП	Винт	Ключ	Опорная пластина	Винт	Ключ
		A	b	L	h	e						
SRACR\L	2020-K06	20	20	125	20	15	RC.T0602	L60M2.5X5	T08	-	-	-
	2525-M06	25	25	150	25	23						
	2020-K08	20	20	125	20	18	RC.T0803	L603X7	T09	-	-	-
	2525-M08	25	25	150	25	23						
	2020-K10	20	20	125	20	20	RC.T10T3	L60M3X7	T15	-	-	-
	2525-M10	25	25	150	25	25						
	2020-K12	20	20	125	20	28	RC.T1204	L60M3.5X1 2	T15	-	-	-
	2525-M12	25	25	150	25	28						
	3225-P12	32	25	170	32	28	RC.T1606	L60M4X16	T20	R16BS	SM0614	S4
	2525-M16	25	25	150	25	35						
	3232-P16	32	32	170	32	40	RCMX20	L60M5X16	T20	R20BS	SM0814	S5
	3232-P20	32	32	170	32	40						
	4040-S20	40	40	250	40	55						

PCLNR\L


95°








Обозначение	Размеры						СМП	Винь	Ключ	Рычаг	Опорная пластина	Штифт
	D _{min}	d	h	L	S	e						
S16Q-PCLNR\L-09	20	16	15	180	10	30	CN..0903	VHX0509	S2	LV3C	-	-
S20Q-PCLNR\L-09	25	20	18	180	12	30						
S25R-PCLNR\L-09	32	25	23	200	15	35						
S20Q-PCLNR\L-12	25	20	18	180	13	30	CN..1204	VHX0613	S2.5	LV4A	-	-
S25R-PCLNR\L-12	32	25	23	200	15	40						
S32S-PCLNR\L-12	44	32	30	250	22	50						
S40T-PCLNR\L-12	54	40	37	300	24	55	CN..1906	CHX0821	S3	LV4	PC12318	SP4
S50U-PCLNR\L-12	63	50	47	350	27	58						
S50U-PCLNR\L-19	63	50	47	350	32	70	CN..1906	VHX1027	S4	LV6	PC19476	SP6

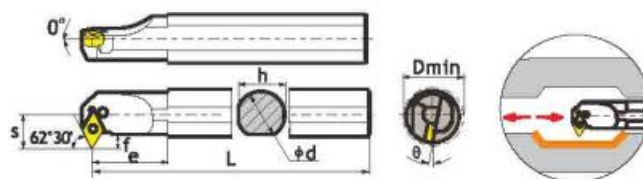PDSNR\L


62° 30'



Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	D _{min}	d	h	L	S	e						
S32S-PDSNR\L-15	40	32	30	250	23	45	DN..1506	VHX0821	S3	LV4B	PD15318	SP4
S40T-PDSNR\L-15	50	40	27	300	28	43						
S32S-PDSNR\L-15-3	40	32	30	250	23	45	DN..1504	VHX0821	S3	LV4	PD15318	SP4
S40T-PDSNR\L-15-3	50	40	37	300	28	43						

PDUNR\L


93°

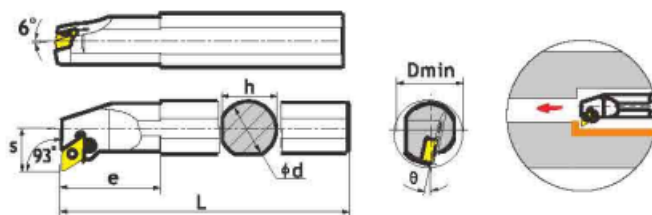

Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	Dmin	d	h	L	S	e						
S20Q-PDUNR\L-11	25	20	18	180	13	30	DN..1104	VHX0512	S2	LV3D	-	-
S25R-PDUNR\L-11	32	25	23	200	17	35		VHX0617	S2.5	LV3	PD11270	SP3
S32S-PDUNR\L-11	40	32	30	250	22	40						
S32S-PDUNR\L-15	40	32	30	250	22	50	DN..1506	VHX0821	S3	LV4B	PD15318	SP4
S40T-PDUNR\L-15	50	40	37	300	27	50	DN..1504	VHX0821	S3	LV4	PD15318	SP4
S32S-PDUNR\L-15-3	40	32	30	300	22	50						
S40T-PDUNR\L-15-3	50	40	37	300	27	50						

PSKNR\L


75°

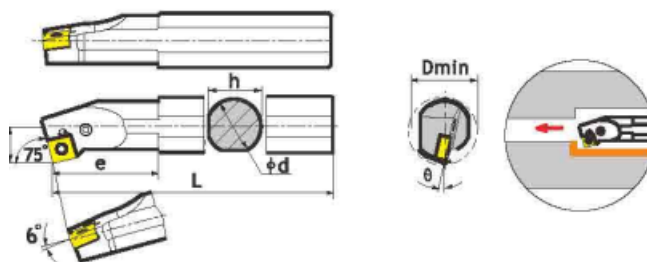

Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	Dmin	d	h	L	S	e						
S25R-PSKNR\L-12	32	25	23	200	17	42	SN..1204	VHX0613	S2.5	LV4A	-	-
S32S-PSKNR\L-12	44	32	30	250	22	45		VHX0821	S3	LV4	PS1238	SP4
S40T-PSKNR\L-12	54	40	37	300	27	50						

PTFNR\L


90°

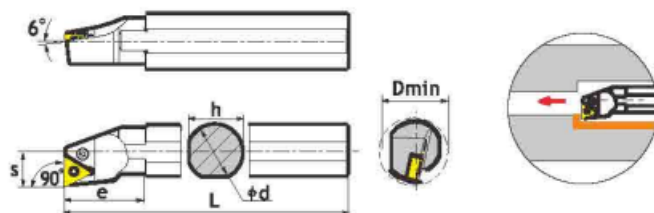







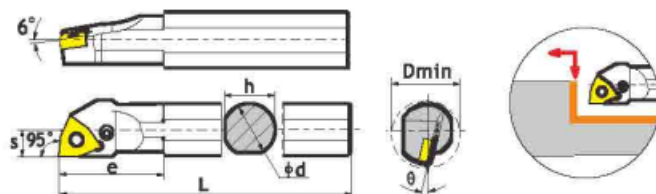









Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	Dmin	d	H	L	S	e						
S16Q-PTFNR\L-11	20	16	15	180	11	28	TN..1103	VHX0509	S2	LV2	-	-
S20Q-PTFNR\L-11	25	20	18	180	13	31						
S25R-PTFNR\L-11	32	25	23	200	17	35						
S25R-PTFNR\L-16	32	25	23	200	17	42	TN..1604	VHX0512	S2	LV3B	-	-
S32S-PTFNR\L-16	44	32	30	250	22	50		VHX0613	S2.5	LV3	PT16476	
S40T-PTFNR\L-16	54	40	37	300	27	55						

PWLNR\L


95°







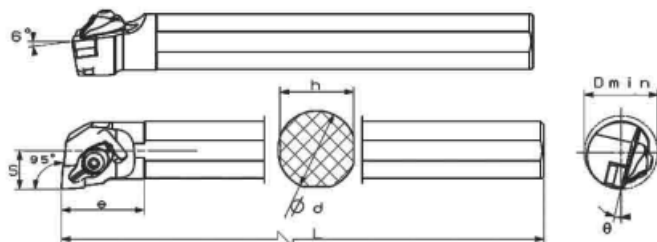

Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	Dmin	d	H	L	S	e						
S16Q-PWLNR\L-06	20	16	15	180	11	25	WN..0604					
S20Q-PWLNR\L-06	25	20	18	180	13	32						
S25R-PWLNR\L-06	32	25	23	200	17	35						
S20Q-PWLNR\L-08	25	20	18	180	13	32	WN..0804					
S25R-PWLNR\L-08	32	25	23	200	17	45						
S32S-PWLNR\L-08	40	32	30	250	22	50						
S40T-PWLNR\L-08	50	40	42	300	30	55						

DCLNR\L


95°







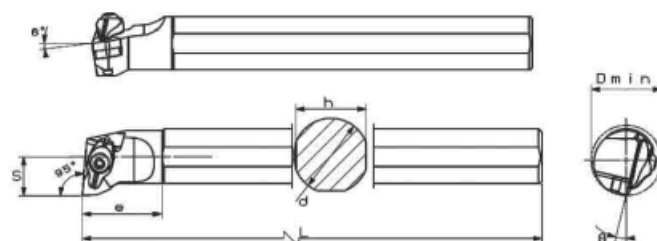

Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	Dmin	d	H	L	S	e						
S25R-DCLNR\L-12-D	32	25	23	200	17	45	CN..1204	MC1203	S3,T15	DML4	DM0520	L60M 4X8.4
S32S-DCLCR\L-12	40	32	30	250	21	45		MC1204	S4,S3	DCL26 12	DM0625	DSP06 12
S40T-DCLNR\L-12	50	40	37	300	25	50						
S50U-DCLNR\L-12	60	50	47	350	32	55						

DWLNR\L


95°



Обозначение	Размеры						СМП	Винт	Ключ	Рычаг	Опорная пластина	Штифт
	Dmin	d	H	L	S	e						
S25R-DWLNR\L-08-D	32	25	23	200	17	40	WN..0804	MW0803	S3,T15	DML4	DM0520	L60M 4*8.4
S32S-DWLNR\L-08	40	32	30	250	22	45		MW0804	S4,S3	DCL26 12	DM0625	DSP06 12
S40T-DWLNR\L-08	50	40	37	300	24	50						
S50U-DWLNR\L-08	60	50	47	350	29	55						

SCLCR\L


95°

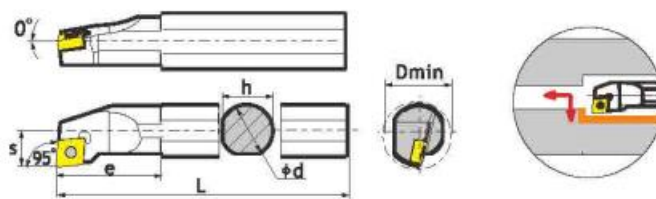

Обозначение	Размеры						СМП	Винт	Ключ
	D _{min}	d	h	L	S	e			
S07K-SCLCR\L-06	9	7	6	125	4.6	15	CC.T0602	L60M2.5X5	T08
S08K-SCLCR\L-06	10	8	7	125	4.6	14			
S10K-SCLCR\L-06	12	10	9	125	6	17			
S12M-SCLCR\L-06	16	12	11	150	7	17			
S12M-SCLCR\L-09	16	12	11	150	8	25	CC.T09T3	L60M4X6	T15
S16Q-SCLCR\L-09	20	16	15	180	9	27			
S20Q-SCLCR\L-09	25	20	18	180	11	28			
S25R-SCLCR\L-09	32	25	23	200	14	35			
S25R-SCLCR\L-12	32	25	23	200	17	38	CC.T1204	L60M5X12	T20
S32S-SCLCR\L-12	36	32	30	250	18	45			
S40T-SCLCR\L-12	50	40	37	300	27	60			

SCKCR\L


75°

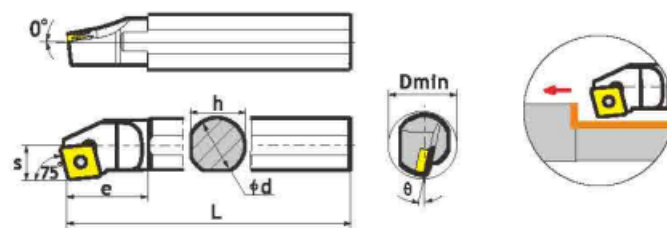




Обозначение	Размеры						СМП	Винт	Ключ
	D _{min}	d	h	L	S	e			
S08K-SCKCR\L-06	10	8	7.5	125	5.5	15	CC.T0602	L60M2.5X5	T08
S10K-SCKCR\L-06	13	10	9	125	7	15			
S12M-SCKCR\L-06	16	12	11	150	8	20			
S12M-SCKCR\L-09	16	12	11	150	8	20			
S16Q-SCKCR\L-09	20	16	15	160	10	25	CC.T09T3	L60M4X6	T15
S20Q-SCKCR\L-09	24	20	19	180	13	30			
S25R-SCKCR\L-09	31	25	24	200	16	35			

SDQCR\L

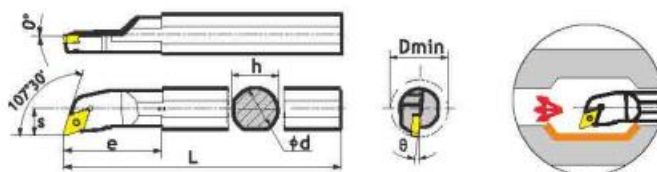
107°30'






Обозначение	Размеры						СМП	Винт	Ключ
	Dm in	d	h	L	S	e			
S08K-SDQCR\L-07	10	8	7	125	6	-	DC.T0702	L60M2.5X5	T08
S10K-SDQCR\L-07	13	10	9	125	7	20			
S12M-SDQCR\L-07	16	12	11	150	9	22			
S16Q-SDQCR\L-07	20	16	15	180	11	27			
S20Q-SDQCR\L-11	25	20	18	180	13	35	DC.T11T3	L60M4X8	T15
S25R-SDQCR\L-11	32	25	23	200	17	38			

SDXCR\L

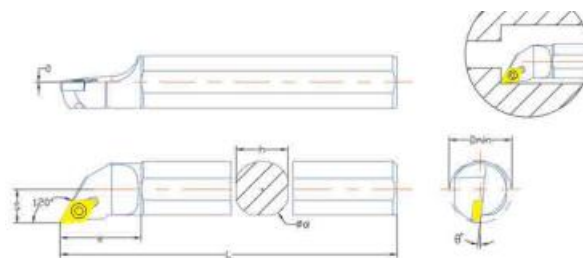
120°






Обозначение	Размеры						СМП	Винт	Ключ
	Dm in	d	h	L	S	e			
S10K-SDXCR\L-07	13	10	9	125	7	18	DC.T0702	L60M2.5X5	T08
S12M-SDXCR\L-07	16	12	11	150	8	20			
S16Q-SDXCR\L-07	20	16	15	180	10	25			
S20Q-SDXCR\L-11	25	20	18	180	13	33			
S25R-SDXCR\L-11	32	25	23	200	16	32	DC.T11T3	L60M4X8	T15

SDWCR\L

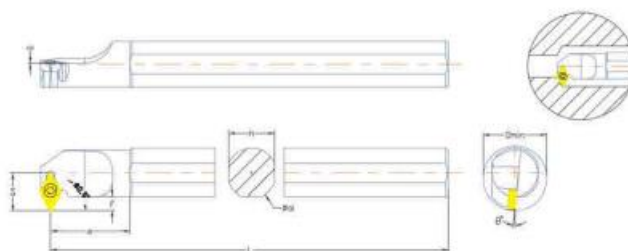
62°30'






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	e	f			
S12M-SDWCR\L-07	19	12	11	125	15	5.5	DC.T0702	L60M2.5X5	T08
S16Q-SDWCR\L-07	23	16	15	180	15	5			
S20Q-SDWCR\L-07	27	20	19	180	22	5.5			
S20Q-SDWCR\L-11	27	20	19	180	25	6	DC.T11T3	L60M4X8	T15
S25R-SDWCR\L-11	3	25	24	200	25	7			
S32S-SDWCR\L-11	40	32	30	250	40	6.5			

SDUCR\L

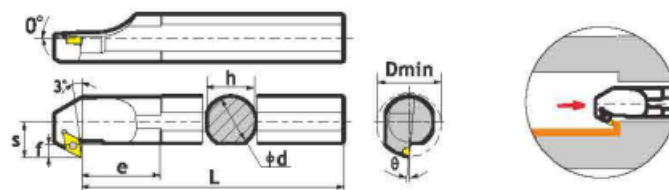
93°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S08K-SDUCR\L-07	13	08	7.5	125	8	4	DC.T0702	L60M2.5X5	T08
S10K-SDUCR\L-07	13	10	9	125	7.7	3			
S12M-SDUCR\L-07	16	12	11	150	8.5	3			
S16Q-SDUCR\L-07	20	16	15	180	11	3.5	DC.T11T3	L60M4X8	T15
S20Q-SDUCR\L-11	25	20	18	180	14.5	5.5			
S25R-SDUCR\L-11	32	25	23	200	18.5	7			

SDZCR\L

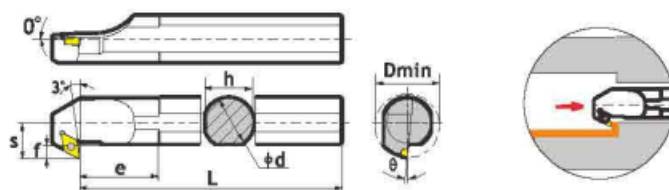
93°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S20Q-SDZCR\L-11	27	20	18	180	16	7.5	DC.T11T3	L60M4X8	T15
S25R-SDZCR\L-11	33	25	23	200	19	7.5			
S32S-SDZCR\L-11	40	32	30	250	23	8.4			
S40T-SDZCR\L-11	50	40	37	300	28	9.4			

SSKCR\L

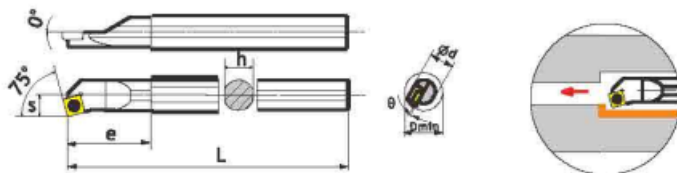
75°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
S12M-SSKCR\L-09	16	12	11	150	9	25	SC.T11T3	L60M4X8	T15
S16Q-SSKCR\L-09	20	16	16	180	11	30			
S20Q-SSKCR\L-09	25	20	18	180	13	35			
S25R-SSKCR\L-09	32	25	23	200	17	40			
S25R-SSKCR\L-12	32	25	23	200	17	40	SC.T1204	L60M5X12	T20
S32S-SSKCR\L-12	40	32	30	250	22	45			

SSSCR\L

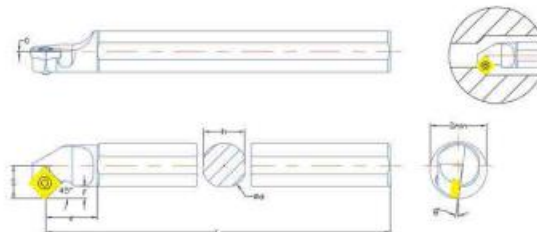
45°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S12M-SSSCR\L-09	17	12	11	150	10	4.5	SC.T09T3	L60M4X8	T15
S16Q-SSSCR\L-09	22	16	15	180	13	5.5			
S20Q-SSSCR\L-09	25	20	18	180	15	6			
S25R-SSSCR\L-09	32	25	23	200	17	5.5			
S25R-SSSCR\L-12	32	25	23	200	17	5.5	SC.T1204	L60M5X12	T20
S32S-SSSCR\L-12	40	32	30	250	22	7			

STFCR\L

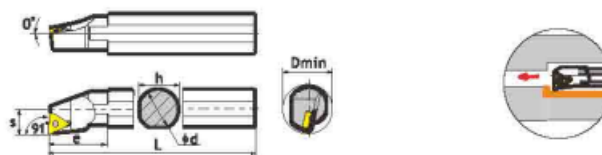
91°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
S08K-STFCR\L-09	10	06	7	125	5.5	8	TC.T0902	L60M2.2X4	T06
S10K-STFCR\L-09	12	10	9	125	6.8	10			
S12M-STFCR\L-09	16	12	11	150	8	10			
S12M-STFCR\L-11	14	12	11	150	6.5	25	TC.T1102	L60M2.5X5	T08
S16Q-STFCR\L-11	18	16	15	180	9	25			
S20Q-STFCR\L-11	25	20	18	180	11	25			
S25R-STFCR\L-16	32	25	23	200	17	40	TC.T16T3	L60M4X8	T15
S32S-STFCR\L-16	36	32	30	250	18	50			
S40T-STFCR\L-16	50	40	37	300	25	60			

STWCR\L

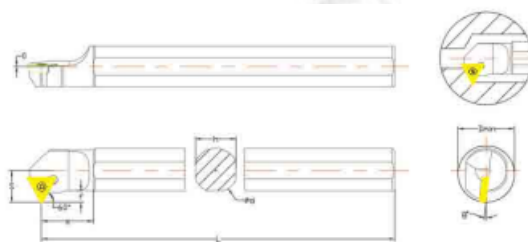
60°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
S10K-STWCR\L-11	14	10	9	125	8	14	TC.T1102	L60M2.5X5	T08
S12M-STWCR\L-11	16	12	11	150	9	25			
S16Q-STWCR\L-11	20	16	15	180	11	30			
S20Q-STWCR\L-11	25	20	19	180	13	30			
S25R-STWCR\L-11	32	25	24	200	17	35			
S20Q-STWCR\L-16	25	20	19	180	14.5	36	TC.T16T3	L60M4X8	T15
S25R-STWCR\L-16	32	25	24	200	17	49			
S32S-STWCR\L-16	39	32	30	250	22	50			
S40T-STWCR\L-16	50	40	37	300	25	50			

STFPR\L

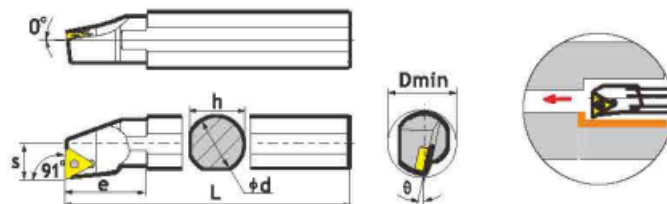
91°



Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
S08K-STFPR\L-09	10	08	7	125	5	14	TP.T0902	L60M2.5X5	T08
S10K-STFPR\L-09	11	10	9	125	5.5	-	TP.T1103		
S12M-STFPR\L-09	13	12	11	150	6.8	-			
S16Q-STFPR\L-09	17	16	15	180	8.8	-			

STUCR\L


93°

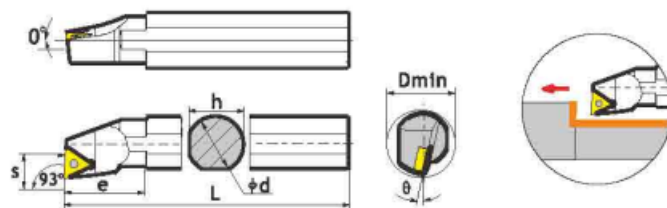

Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
S08K-STUCR\L-09	11	08	7	125	5.5	-	TC.T0902	L60M2.2X6	T06
S08K-STUCR\L-0-A16	11	16	15	125	5.5	24			
S10K-STUCR\L-09	13	10	9	125	6	10			
S10K-STUCR\L-09-A16	13	16	15	125	7	30			
S10K-STUCR\L-11	13	10	9	125	7	10	TC.T1102	L60M2.5X5	T08
S10K-STUCR\L-11-A16	16	16	15	150	7	30			
S12M-STUCR\L-11	16	12	11	150	7	25			
S12M-STUCR\L-11-A16	16	16	15	150	7	30			
S16Q-STUCR\L-11	20	16	15	180	9	25			
S20Q-STUCR\L-11	25	20	19	180	11	25			
S25R-STUCR\L-11	31	25	24	20	15	34	TC.T16T3	L60M4X8	T15
S20Q-STUCR\L-16	25	20	19	180	13	36			
S25R-STUCR\L-16	31	25	24	200	17	40			
S32S-STUCR\L-16	39	32	30	250	18	50			
S40T-STUCR\L-16	50	40	38	300	25	60			

SVQCR\L


107.5°

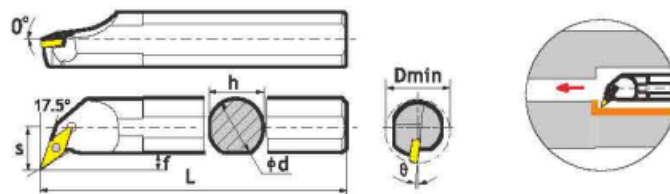




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S20Q-SVQCR\L-16	27	20	18	150	15	6.0	VC.T1604	L60M3X8	T15
S25R-SVQCR\L-16	32	25	23	200	18.5	6.9			
S32S-SVQCR\L-16	40	32	30	250	22	8.4			
S40T-SVQCR\L-16	50	40	37	300	27	9.4			

SVQBR\L

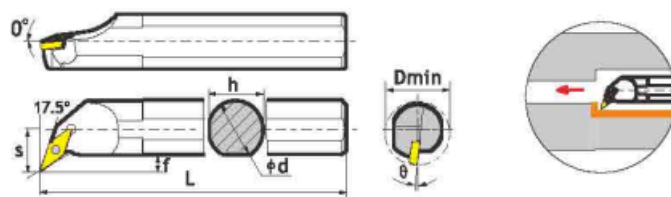
107.5°






Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S20Q-SVQBR\L-16	27	20	18	150	15	6.0	VB.T1604	L60M3X8	T15
S25R-SVQBR\L-16	32	25	23	200	18.5	6.9			
S32S-SVQBR\L-16	40	32	30	250	22	8.4			
S40T-SVQBR\L-16	50	40	37	300	27	9.4			


SVUCR\L

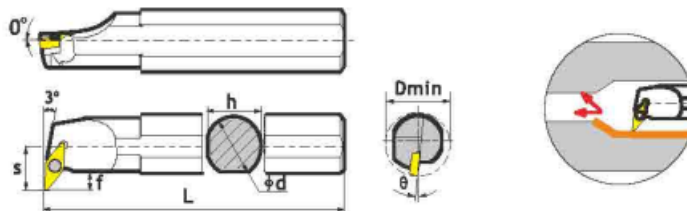93°




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S16Q-SVUCR\L-11	22	16	15	180	13.5	6	VC.T1103	L60M2.5X5	T08
S20Q-SVUCR\L-16	31	20	19	180	19	9.5	VC.T1604	L60M3X8	T15
S25R-SVUCR\L-16	35	25	23	200	20	8.4			
S32S-SVUCR\L-16	42	32	30	250	22	8.4			
S40T-SVUCR\L-16	51	40	37	300	27	11			

SVWCR\L

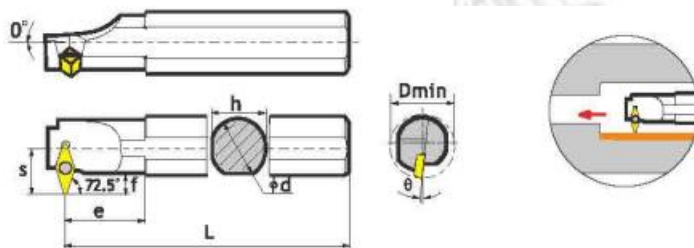

Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S16Q-SVWCR\L-11	25	16	15	180	14	6.9	VC.T1103	L60M2.5X5	T08
S20Q-SVWCR\L-16	32	20	18	180	22	12.9	VC.T1604	L60M3X8	T15
S25R-SVWCR\L-16	36	25	23	200	22	10			
S32S-SVWCR\L-16	45	32	30	250	27	12.2			
S40T-SVWCR\L-16	55	40	37	300	30	11			


SVXCR\L

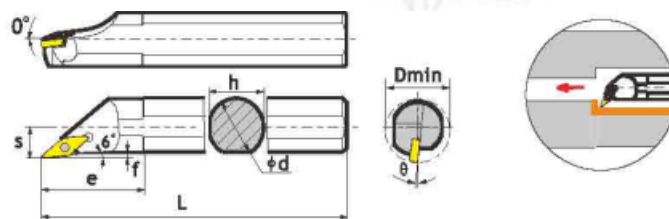




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S16Q-SVXCR\L-11	20	16	15	180	9.5	2	VC.T1103	L60M2.5X5	T08
S20Q-SVXCR\L-16	25	20	18	180	13	4	VC.T1604	L60M3X8	T15
S25R-SVXCR\L-16	32	25	23	200	14.5	3			
S32S-SVXCR\L-16	40	32	30	250	21	6			
S40T-SVXCR\L-16	50	40	37	300	24	5.5			


SVZCR\L

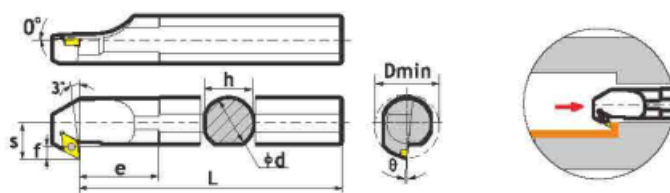93°



Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
S16Q-SVZCR\L-11	22	16	15	180	13.5	6.5	VC.T1103	L60M2.5X5	T08
S20Q-SVZCR\L-11	28	20	18	180	16	7.5			
S25R-SVZCR\L-16	34	25	23	200	21	10	VC.T1604	L60M3X8	T15
S32S-SVZCR\L-16	40	32	30	250	23	9			
S40T-SVZCR\L-16	50	40	37	300	29	11			

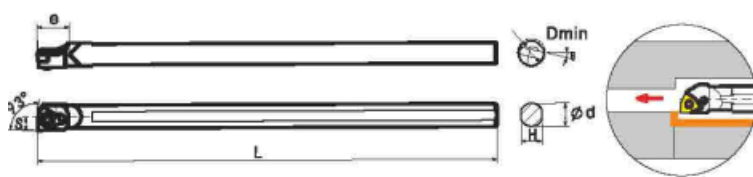


SWUBR\L




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
C05H-SWUBR\L-06	6	5	4.5	100	3	7	WB.T0601	L60M2.0X4.3	T03
C06J-SWUBR\L-06	7	6	5.5	110	3.5	7			




SCLCR\L




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	f			
C07K-SCLCR\L-06	10	7	6.5	125	4.5	8	CC.T0602	L60M2.5X5	T08
C08K-SCLCR\L-06	10	8	7.5	125	5	8			
S10M-SCLCR\L-06	12	10	9.5	150	6	14			
S12Q-SCLCR\L-06	14	12	11	180	7	14			
C12Q-SCLCR\L-09	16	12	11	180	8	14	CC.T09T3	L60M3X8	T15
S14Q-SCLCR\L-09	16	14	13	180	8	18			
S16R-SCLCR\L-09	18	16	15	200	9	20			
S20S-SCLCR\L-09	22	20	19	250	11	26			
S25T-SCLCR\L-09	28	25	23	300	14	29			

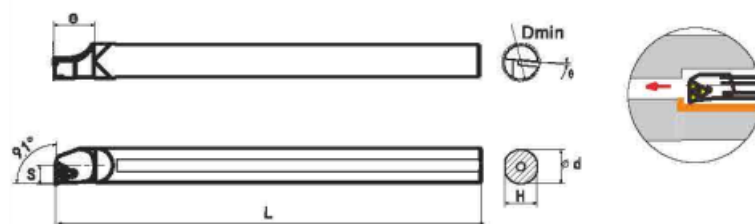


STFCR\L




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
C08K-STFCR\L-09	10	8	7.5	125	5	8	ТС.Т0902	L60M2.2X8	Т06
S10M-STFCR\L-09	12	10	9.5	150	6	14			
S12Q-STFCR\L-09	16	12	11	180	8	14			
S12Q-STFCR\L-11	16	12	11	180	8	14	ТС.Т1102	L60M2.5X5	Т08
S16R-STFCR\L-11	18	16	15	200	9	20			
S20S-STFCR\L-11	28	20	19	250	12	26			

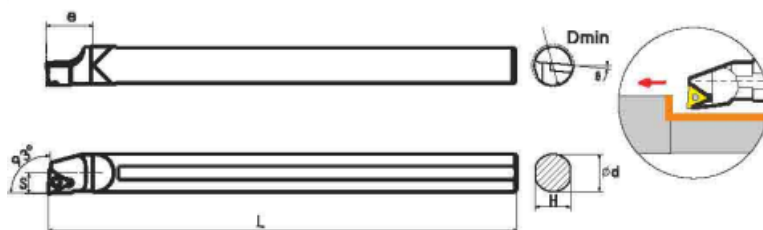STUPR\L




Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
C08K-STUPR\L-09	11	8	7.5	125	5.5	8	ТР.Т0902	L60M2.5X5.0	Т08
C10M-STUPR\L-09	13	10	9.5	150	6.5	14			
C12Q-STUPR\L-09	16	12	11	180	7.5	14			
C12Q-STUPR\L-11	16	12	11	180	7.5	14	ТР.Т1103	L60M3.0X7	Т10
C16R-STUPR\L-11	18	16	15	200	9	20			
C20S-STUPR\L-11	20	20	19	250	12	26			

SDQCR\L

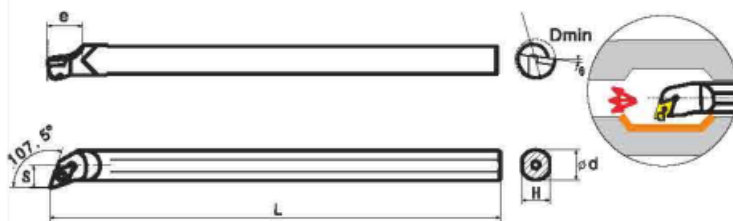

Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
C10M-SDQCR\L-07	13	10	9.5	150	7	14	DC.T0702	L60M2.5X5.0	T08
C12Q-SDQCR\L-07	16	12	11	180	9	14			
C16R-SDQCR\L-07	20	16	15	180	13	20			

SDUCR\L

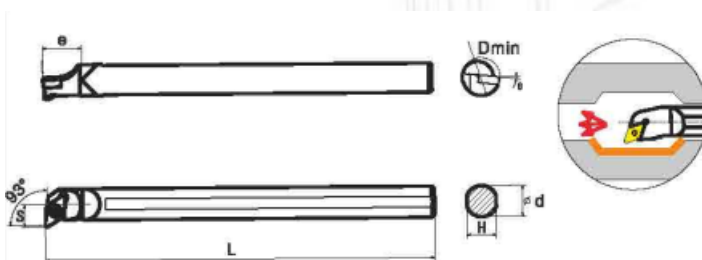

Обозначение	Размеры						СМП	Винт	Ключ
	Dmin	d	h	L	S	e			
C10M-SDQCR\L-07	13	10	9.5	150	7	14	DC.T0702	L60M2.5X5.0	T08
C12Q-SDQCR\L-07	16	12	11	180	9	14			
C16R-SDQCR\L-07	20	16	15	200	11	20			
C20S-SDUCR\L-07	25	20	19	250	13	16			

ВИННСЛА

V I N N S L

